


WHEN INSTALLING THE ADVANCED SWAY BAR BUSHING KIT YOU MUST RETAIN THE OEM STEEL BACKING PLATE AND MOUNTING HARDWARE.

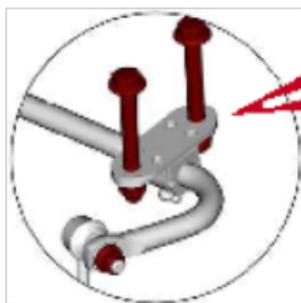

RE-USE STEEL
BACKING
PLATE

REMOVE THE BOTTOM BUSHING HALF FROM THE BRACKET AND COAT THE INSIDE OF THE BUSHING HALVES WITH GREASE. PLACE THE BRACKET AND UPPER BUSHING HALF OVER THE SWAY BAR. THE GRAY STRIPE ON THE BUSHING HALVES MUST FACE OUTWARD AND WILL BE HIDDEN BY THE BRACKET THRUST SHOULDER.

THE BRACKETS ARE MARKED “INSIDE”. THE INSIDE MARKINGS SHOULD FACE EACH OTHER WITH THE GREASE ZERKS FACING OUTWARD. PLACE THE LOWER BUSHING HALF INTO THE BRACKET AND LOOSELY INSTALL OEM BACKING PLATE AND MOUNTING BOLTS. LEAVE ALL BOLTS LOOSE UNTIL BOTH SIDES ARE INSTALLED.

INSTALL USING A THREAD LOCKING COMPOUND OR REPLACE THE OEM NYLOCK NUTS TO ENSURE THE HARDWARE DOES NOT LOOSEN.