

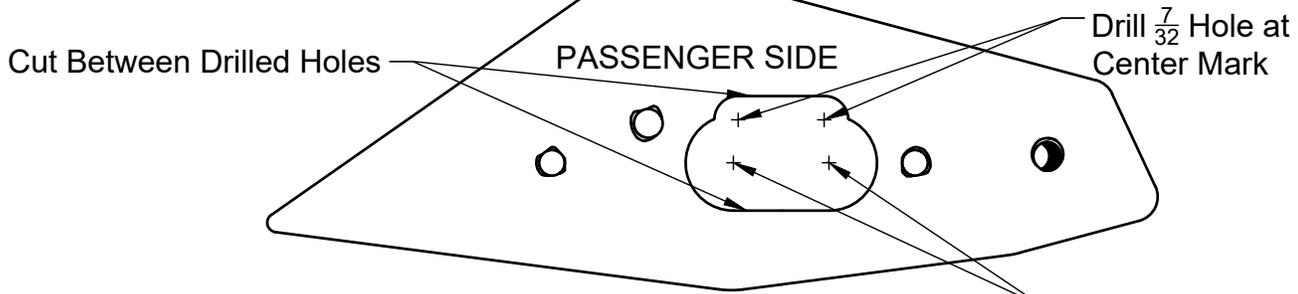


Pre-Drill Holes Using $\frac{1}{8}$
Drill Bit for Best Results

Mounting Bolts are Inserted Parallel to
Each Other as Depicted by Lines Below.

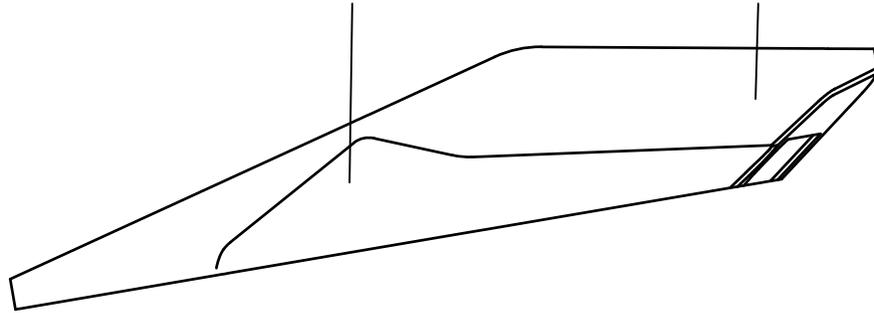

Line Up Holes to Existing and
Tape Template in Place

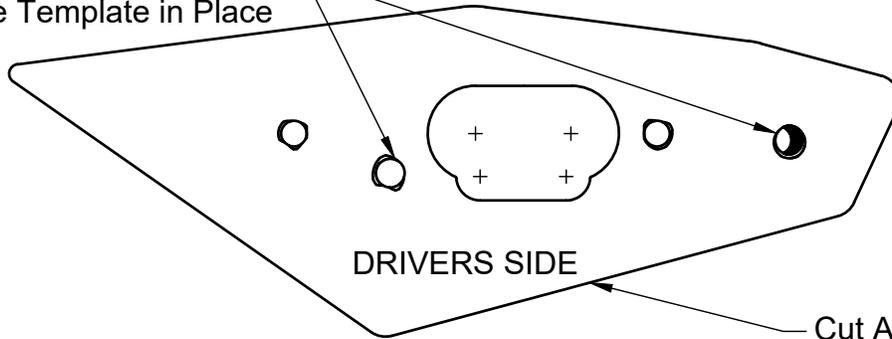

Drill $\frac{1}{2}$ Hole at
Center Mark

Cut Around Perimeter
of Templates



PROJECT

Drilling Template

TITLE

CanAm X3 Front Marker Lights

APPROVED Evotech Motorsports

SIZE

CODE

DWG NO

REV

CHECKED

A

DRAWN

4/25/2022

SCALE 1:1

WEIGHT

SHEET 1/1